## Technical installation guide


for RubbaGrass® and RubbaSnow®




Europe's leading manufacturer of rubber matting


Boggy area

- 1. Mark out the site where the RubbaGrass® is to be laid. Clear debris and cut the grass short.
- Level out uneven areas with a quality top soil for seeding or to turf the area.
- 3. Where ground is prone to being boggy and wet you may lay Grasshield to help stabilise the ground in that area.
- 4. Lay the safety mats onto the ground, cutting to fit around any obstacles or equipment.
- 5. Ensure the rubber safety mats are butted closely together when laying, then use cable ties at 150mm intervals to securely join the mats together.

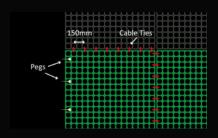

- 6. Cut the ends of the cable ties and push the, "knuckles", of the cable ties underneath the matting.
- 7. Peg the mats to the ground, using approximately 3 5 pegs per perimeter edge.

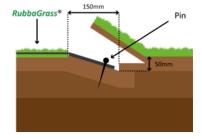

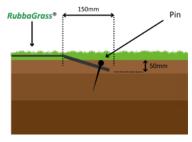

## **Optional Steps**

These steps will achieve better edge blending and avoid tripping over the mats or having them pulled up by mowing.

- 1. Roll back approximately 150mm from the edge of the rubber safety matting using a spade or cutting tool.
- 2. Put the rubber safety mats back into place and peg through the holes.
- 3. Refill the edge with top soil and seed or turf to regain the original level surface.

+44 (0) 1794 328 411

**s**ales@grassmats.eu

www.grassmats.eu